

Reading the Elster AS230 Single Phase Meter

The Elster AS230 has built-in GSM communications which allows the register reads and half hourly consumption data to be remotely retrieved daily. This sheet describes how to manually read the meter

The LCD meter display automatically scrolls through the time, date and the register reads or can be manually cycled by the YELLOW button. The number of registers displayed depends on the tariff to which the meter has been programmed. The meaning of each value is displayed in the bottom left hand corner of the display.



Segment Test



Current Time



Current Date



Cumulative Import kWh



Cumulative Export kWh



TOU Rate 1 kWh



TOU Rate 2 kWh
Other rates may follow



Further Information

Please contact us on 08457 448900 or smartmetering@westernpower.co.uk