

## Reading the Elster A1140 Three Phase Meter.

The display on the meter cycles through this sequence with consecutive presses of the right hand YELLOW button. The display will return to the default display automatically after approximately 20 secs; any button presses after this will start the sequence from the beginning.

The display has the reading (complete with any applicable register multiplier by the addition of "0" in a smaller font size).

The reading energy quantity and an arrow showing whether import or export (Arrow pointing right = Import, Arrow pointing left = Export).



Segment Test (888888)



Time



Date



Cumulative Import AI kWh



Cumulative Export AE kWh



Cumulative CD 1 (lagging) kVAh



Cumulative CD 2 (leading) kVArh



TOU 1 (Rate 1) kWh



TOU 2 (Rate 2) kWh  
 Other Rates may follow



**Further Information**

Please contact us on 08457 448900 or [smartmetering@westernpower.co.uk](mailto:smartmetering@westernpower.co.uk)